



Instruction Diagram

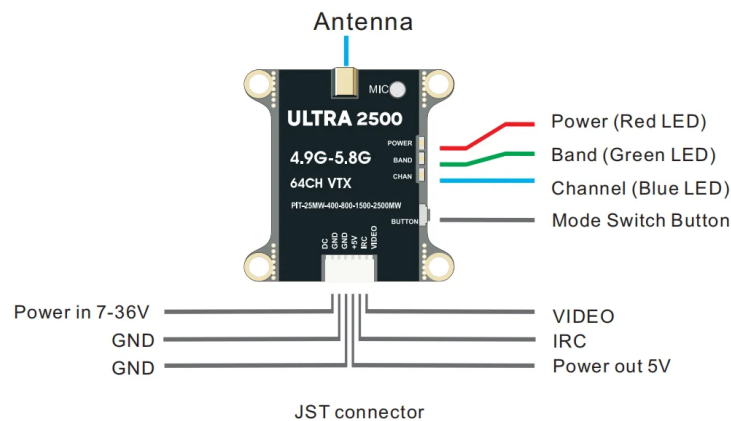

JST Connection

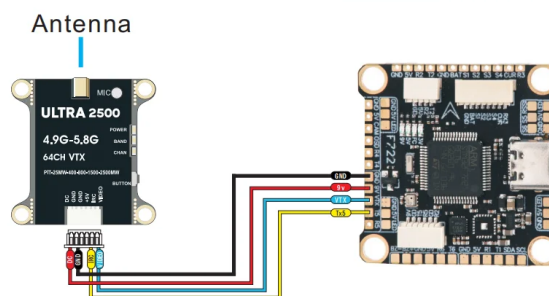

WARNING:

1. Install antenna before use.
2. To prevent overheating, provide constant airflow and a well ventilated environment. Install a cooling fan if operating in confined conditions.
3. The 5V Output is just used for a Camera/Cooling Fan! Don't connect Power Input / Battery to 5V Output port. Otherwise the VTX will be damaged.

How to set

1. How to set Channel:

Press and hold for 2 seconds to enter the Channel Selection, Blue light flashing Short Press 1 seconds to change the channel:

LED Color	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
Blue	Flash 1X	Flash 2X	Flash 3X	Flash 4X	Flash 5X	Flash 6X	Flash 7X	Flash 8X

2. How to set Band:

Press and hold for 2 seconds to enter the Band Selection, Green light flashing Short Press 1 seconds to change the Band:

LED Color	Boscam_A	Boscam_B	Boscam_E	FATSHARK	Race Band	Boscam_D	LOWRACE	Boscam_X
Green	Flash 1X	Flash 2X	Flash 3X	Flash 4X	Flash 5X	Flash 6X	Flash 7X	Flash 8X

3. How to set Power:

Press and hold for 2 seconds to enter the Power Selection, Red light flashing Short Press 1 seconds to change the Power

LED Color	25mW	400mW	800mW	1500mW	2500mW	Pit
Red	Flash 1X	Flash 2X	Flash 3X	Flash 4X	Flash 5X	Flash 6X

Frequency Table

Channel	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
Boscam_A	5865	5845	5825	5805	5785	5765	5745	5725
Boscam_B	5733	5752	5771	5790	5809	5828	5847	5866
Boscam_E	5705	5685	5665	5645	5885	5905	5925	5945
FATSHARK	5740	5760	5780	5800	5820	5840	5860	5880
Race Band	5658	5695	5732	5769	5806	5843	5880	5917
Boscam_D	5362	5399	5436	5473	5510	5547	5584	5621
Low Race	5362	5399	5436	5473	5510	5547	5584	5621
Boscam_X	4990	5020	5055	5080	5110	5140	5170	5200