



Propeller Wrench

Readytosky
Wrench for M5 propeller nuts · User Manual



Always disconnect the battery from the model before handling the propellers.

www.rotorama.com

Contents

1. Product description

1.1 What it is for

1.2 Technical data and package contents

2. Use

2.1 Safety

2.2 Tightening a propeller

2.3 Loosening and removing a propeller

2.4 Care and storage

3. Information for the EU and Czech Market

3.1 Importer and responsible person in the EU

3.2 Disposal

4. Warranty and rights arising from defective performance

1. Product description

1.1 What it is for

The Readytosky Propeller Wrench is a compact hand wrench for tightening and loosening propellers on racing drones and other models where the propeller is secured on the motor shaft with an **M5 nut**.

Thanks to its small size it fits in any pocket, so you can always have it at hand when flying – for example for a quick replacement of a damaged propeller between flights.



Readytosky Propeller Wrench (illustrative photo)

1.2 Technical data and package contents

Product designation	Readytosky Propeller Wrench
Manufacturer	Readytosky
Intended for	M5 propeller nuts
Colour	black / red
Package contents	1× propeller wrench
Not included	propellers, propeller nuts, motors or any other tools

2. Use

2.1 Safety

- Always **disconnect the battery from the model** before fitting the wrench. An accidental motor start (Arm, motors enabled) could cause serious injury.
- Propellers have sharp edges. Keep your fingers away from the propeller blades when loosening and tightening.
- The wrench is intended only for loosening and tightening nuts. Do not use it as a lever or for any other purpose.
- Keep out of the reach of small children – small objects may be swallowed.

2.2 Tightening a propeller

- ① Place the propeller on the motor shaft with the correct side facing up and in the correct direction of rotation according to the layout of your model.
- ② Screw the M5 nut onto the shaft thread by hand.
- ③ Fit the wrench onto the nut using the opening that fits it exactly, without play.
- ④ Hold the motor bell with your other hand so that the motor does not turn, and tighten the nut with the wrench.
- ⑤ Tighten the nut firmly but with care – excessive force can damage the propeller hub or the shaft thread.

*** The thread direction of the nuts may differ between motors. Before loosening or tightening a nut, check the thread direction in the documentation of the motor or model.**

2.3 Loosening and removing a propeller

- ① Disconnect the battery.
- ② Hold the motor bell and fit the wrench onto the nut.
- ③ Loosen the nut by turning it opposite to the tightening direction and finish unscrewing it by hand.
- ④ Remove the propeller from the shaft. Always replace a damaged propeller with a new one.

2.4 Care and storage

- After every crash of the model, check that the propeller nuts are tight.
- Keep the wrench clean and dry; remove dirt from the openings with a dry cloth or brush.
- If the edges of an opening are worn and the wrench slips on the nut, stop using it – it could damage the edges of the nut.

3. Information for the EU and Czech Market

The references to legislation in this chapter and in Chapter 4 describe the situation under Czech law. The law of the country in which the product is used is decisive for its use.

3.1 Importer and responsible person in the EU

The product is placed on the European Union market by the importer stated below, who is at the same time the responsible person within the meaning of Article 16 of Regulation (EU) 2023/988 of the European Parliament and of the Council on general product safety (GPSR).

Importer / responsible person in the EU	Rotorama, s.r.o.
Company ID (IČO)	051 57 692
VAT ID (DIČ)	CZ05157692
Registered office	Okrajová 1351, 674 01 Třebíč, Czech Republic
E-mail	info@rotorاما.cz
Phone	+420 252 252 098
Website	www.rotorاما.com

3.2 Disposal

- The product is not electrical equipment and contains no battery or accumulator.
- Hand over the product you no longer need to separated waste collection or a collection yard in accordance with the rules applicable where you dispose of it. Sort the packaging according to its material.

4. Warranty and rights arising from defective performance

The rights and obligations of the contracting parties are governed by Czech law, in particular by Act No. 89/2012 Coll., the Civil Code, and Act No. 634/1992 Coll., on consumer protection.

- The seller is liable to the buyer for the product being free of defects on receipt. If the buyer is a consumer, a defect may be notified **within two years of receipt** of the product (Section 2165 of the Civil Code).
- If a defect appears within **one year** of receipt, the product is deemed to have been defective already at the time of receipt (Section 2161(5) of the Civil Code).
- When purchasing online, a consumer has the right to **withdraw from the contract within 14 days** of receiving the goods without giving a reason (Section 1829 of the Civil Code).
- Claims should be made with the retailer from whom you purchased the product. The importer's contact details are given in Chapter 3.1.
- The competent body for out-of-court settlement of consumer disputes is the **Czech Trade Inspection Authority**, Štěpánská 796/44, 110 00 Prague 1, www.coi.cz.