



Rotorama flag - textile

Textile flag for marking out an FPV race track
User manual



The package contains only the textile part of the flag. The pole, ground spike and stand are not included. The product is intended for persons aged 14 and over.

www.rotorama.com

Contents

1. Product description

1.1 What the flag is for

1.2 Technical data and package contents

2. Use

2.1 What you will need

2.2 Setting up the flag

2.3 Placing flags on the track

2.4 Safety and care

3. Information for the EU and Czech Market

3.1 Importer and responsible person in the EU

3.2 Disposal

4. Warranty and rights arising from defective performance

1. Product description

1.1 What the flag is for

The Rotorama flag is used to mark obstacles on FPV drone race tracks and during training. The textile part, measuring approximately 230 × 55 cm, is clearly visible even in the FPV goggle image, so the pilot can easily tell where the track goes and where to turn.

The flag is slid onto a pole by its sleeve, and the pole is mounted in a ground spike or a stand. The package contains **only the textile part** – the pole and the ground spike or stand must be obtained separately (see Chapter 2.1).



*Flag on a pole mounted in a ground spike
on the flying field*

1.2 Technical data and package contents

Product designation	Rotorama flag – textile
Size of the textile part	approx. 230 × 55 cm
Maximum pole diameter	approx. 25 mm
Package contents	textile part of the flag
Pole, ground spike / stand	not included

2. Use

2.1 What you will need

- A pole with a diameter of **no more than approx. 25 mm** that fits into the sleeve of the flag and is long enough for the flag to be fully stretched once slid on.
- As a suitable telescopic pole we recommend the **Decathlon Firstfish 300** rod.
- **A ground spike or a stand** – always required; the pole itself cannot be stuck into the ground. Use a spike in soft soil and a stand on hard or paved surfaces.

2.2 Setting up the flag

- ① Extend the telescopic pole to its full length and lock the individual sections so that they do not slide in under the weight of the flag.
- ② Insert the thinner end of the pole into the sleeve along the edge of the flag and push it in until the tip reaches the top end of the sleeve.
- ③ Push the ground spike firmly into the ground, or set up the stand. Insert the lower end of the pole into it and secure it.
- ④ Check that the pole stands firmly, that the flag does not slide down and that it turns freely in the wind.

2.3 Placing flags on the track

- Place the flags where the pilot is to turn or where the track is to pass – typically at turning points and on the inside of corners.
- Space them so that the next flag can be seen from the drone before the pilot reaches it.
- Do not place flags where pilots, spotters or spectators are standing, or close to them – route the track at a safe distance from people.
- During training and racing, follow the drone regulations of the country in which you are flying – the law of the country of operation always applies.

2.4 Safety and care

- In strong wind, take the flag down or secure the pole – the pole may bend, or the flag may tip over together with the spike or stand.
- An impact of the drone or spinning propellers may tear the fabric. Always check propellers that got caught in the fabric before the next flight.
- Let a wet flag dry before putting it away. Store it dry and out of direct sunlight.
- The product is intended for persons aged 14 and over.

3. Information for the EU and Czech Market

3.1 Importer and responsible person in the EU

The product is placed on the European Union market by the importer stated below, who is at the same time the responsible person within the meaning of Article 16 of Regulation (EU) 2023/988 of the European Parliament and of the Council on general product safety (GPSR).

Importer / responsible person in the EU	Rotorama, s.r.o.
Company ID (IČO)	051 57 692
VAT ID (DIČ)	CZ05157692
Registered office	Okrajová 1351, 674 01 Třebíč, Czech Republic
E-mail	info@rotorama.cz
Phone	+420 252 252 098
Website	www.rotorama.cz

3.2 Disposal

No electronics or batteries – not subject to the take-back of electrical equipment. Dispose of it at a textile collection point or according to your municipal waste rules.

4. Warranty and rights arising from defective performance

The rights and obligations of the contracting parties are governed by Czech law, in particular by Act No. 89/2012 Coll., the Civil Code, and Act No. 634/1992 Coll., on consumer protection.

- The seller is liable to the buyer for the product being free of defects on receipt. If the buyer is a consumer, a defect may be notified **within two years of receipt** of the product (Section 2165 of the Civil Code).
- If a defect appears within **one year** of receipt, the product is deemed to have been defective already at the time of receipt (Section 2161(5) of the Civil Code).
- When purchasing online, a consumer has the right to **withdraw from the contract within 14 days** of receiving the goods without giving a reason (Section 1829 of the Civil Code).
- Claims should be made with the retailer from whom you purchased the product. The importer's contact details are given in Chapter 3.1.
- The competent body for out-of-court settlement of consumer disputes is the **Czech Trade Inspection Authority**, Štěpánská 796/44, 110 00 Prague 1, www.coi.cz.