
SkyRC Q200neo

AC/DC Multi-Function Smart Charger
Instruction Manual

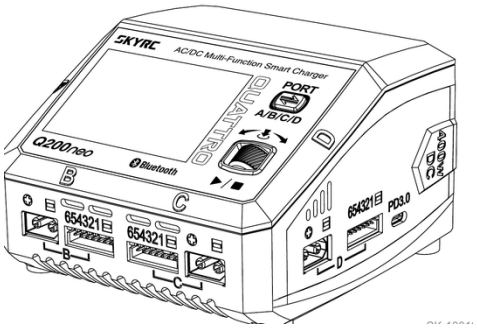

Read this manual carefully before first use. Improper charging may cause the battery to catch fire or explode. Never leave charging batteries unattended.

Manufacturer: SkyRC Technology Co., Ltd. · Importer: Rotorama, s.r.o., www.rotorama.com

Contents

1. Introduction and Safety

1.3 Warnings

2. Meet Q200neo

2.2 Specification

2.3 Explanation of Buttons

2.4 Standard Battery Parameters

2.5 Manufacturer and Conformity

3. Power and Battery Connection

4. Charging Programs

4.1 Working Modes

4.2 Home Screen and Menu Structure

4.3 Lithium Battery Program

4.4 NiMH/NiCd Battery Program

4.5 Pb Lead-Acid Battery Program

5. Additional Functions

5.1 Charger Master (PC/Mac)

5.2 SkyRC App Control

5.3 DC Power

5.4 USB Type-C PD/QC3.0 Output

6. Settings

6.2 System Setting

7. Errors and Warnings

8. Information for the EU and Czech Market

9. Warranty and Rights Arising from Defective Performance

1. Introduction and Safety

1.1 Introduction

Introducing the SkyRC Q200neo AC/DC Multi-Function Smart Charger, an enhanced version of the Q200.

With four independent ports and compatibility with various RC batteries, it adapts to different chemistries. It can act as a quad-output digital power supply, offering adjustable voltage (1.0–30 V) and current (0.1–10.0 A) per output. The 20 W USB-C PD 3.0 charging port allows rapid charging of smartphones, tablets and the 2020 MacBook Air.

Connect effortlessly via Type-C or Bluetooth, and control it with Charger Master on PC, Mac or smartphone.

Before using it for the first time, it is crucial to carefully read through the instructions, warnings and safety tips provided. Improperly charging a battery or misusing the charger can lead to potentially hazardous situations such as fire or explosion.

1.2 Package Contents

Item	Qty
SkyRC Q200neo charger	1×
User manual	1×
AC power cord	1×

1.3 Warnings

This product may only be used by persons aged 14 and over. Failure to exercise caution while using this product and comply with the following warnings could result in a product malfunction, electrical issues, excessive heat, FIRE, and ultimately injury and property damage.


- Never leave charging batteries unattended during use.
- Never charge batteries overnight.
- Never attempt to charge dead, damaged or wet battery packs.
- Never attempt to charge a battery pack containing different types of batteries.
- Never charge batteries in extremely hot or cold places or in direct sunlight.
- Never charge a battery if the cable has been pinched or shorted.
- Never connect the charger if the power cord has been pinched or shorted.
- Never attempt to dismantle the charger or use a damaged charger.
- Never attach your charger to both an AC and a DC power source at the same time.
- Always use the charger with the correct charging and discharging program.
- Always use only rechargeable batteries designed for use with this type of charger. Never attempt to charge non-rechargeable (primary) batteries.
- Never use the charger on car seats, carpets or similar surfaces.
- Always operate the charger away from flammable and explosive materials.

General rules for charging lithium batteries


- Charge on a non-flammable surface, ideally in a fireproof bag (LiPo safe bag).
- Let the battery cool down after a flight before charging it.
- Do not charge a swollen, deformed or mechanically damaged battery; take it out of service.
- Charge lead-acid (Pb) batteries in a well-ventilated area.
- If you notice an odour, smoke or excessive heating, stop charging immediately, disconnect the power and move the battery to a safe place.

2. Meet Q200neo

2.1 Parts Overview

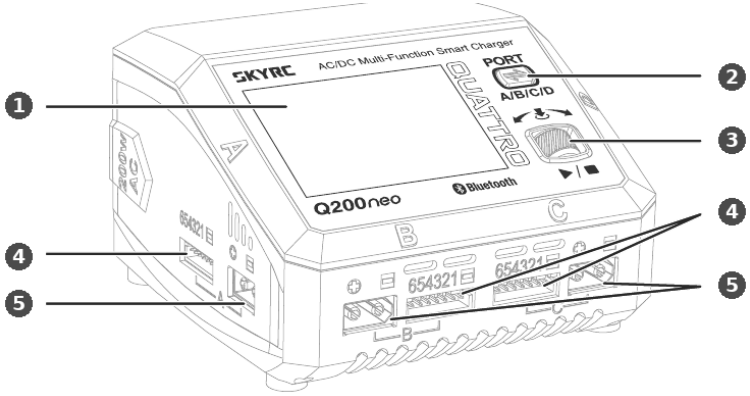

Front view

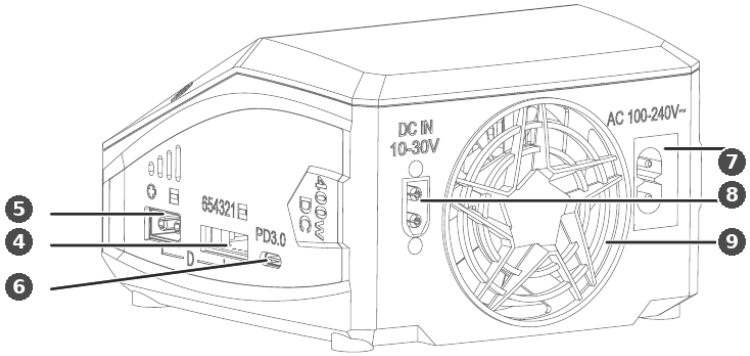

Rear view


No.	Part	No.	Part
①	LCD display	⑥	PD/QC3.0 charge & data port (USB-C)
②	PORT button – switch between ports A, B, C and D	⑦	AC input 100–240 V
③	Scroll wheel – select the parameters and confirm	⑧	DC input 10–30 V
④	Balance port	⑨	Smart ventilation fan
⑤	XT60 output socket		

2.2 Specification

Item	Option	Specification
Model		Q200neo
Input voltage	AC	100–240 V (50/60 Hz)
	DC	10.0–30.0 V
Input current	DC	30.0 A
Charge power	AC	Total 200 W One port: 100 W max. Two ports: 2× 100 W Three ports: 3× 66 W Four ports: 4× 50 W PD3.0: 20 W max. Power distribution priority: Type-C > A > B > C > D
	DC	Total 400 W One port: 100 W max. Two ports: 2× 100 W Three ports: 3× 100 W Four ports: 4× 100 W PD3.0: 20 W max. Power distribution priority: Type-C > A > B > C > D
Discharge power	Main port	5 W
	Main port + balance port	25 W (LiPo/6S)
Charge current	LiPo/LiFe/Li-ion/LiHV/ NiMH/NiCd/Pb	0.1–10.0 A
Discharge current	LiPo/LiFe/Li-ion/LiHV/ NiMH/NiCd/Pb	0.1–2.0 A
Balance current	LiPo/LiFe/Li-ion/LiHV	800 mA max.
Trickle charge current	NiMH/NiCd	50–300 mA & OFF
	LiPo/LiFe/Li-ion/LiHV	1–6S
Battery types	NiMH/NiCd	1–15S
	Pb	3S/6S/12S
Working modes	LiPo/LiFe/Li-ion/LiHV	Balance CHG, Charge, Discharge, Storage
	NiMH/NiCd	Normal, Discharge, Re-Peak, CYCLE_D_C, CYCLE_C_D
	Pb	Charge, AGM Charge, Cold Charge, Discharge

Item	Option	Specification
	Voltage	1.0–30.0 V
DC power supply	Current	0.1–10.0 A
	Power	Max. 100 W single port
USB Type-C output	QC3.0	5 V 3 A, 9 V 2 A, 12 V 1.5 A; 18 W
	PD	5 V 3 A, 9 V 2.2 A, 12 V 1.67 A; 20 W
Size	Length × width × height	123 × 119 × 78 mm
Weight	Net weight	680 g
Working environment	Temperature	0–40 °C
	Humidity	5–75 %
Storage environment	Temperature	−10 °C to 60 °C
	Humidity	5–75 %
Wireless interface	Bluetooth 5.0	Frequency band 2400–2483.5 MHz

2.3 Explanation of Buttons

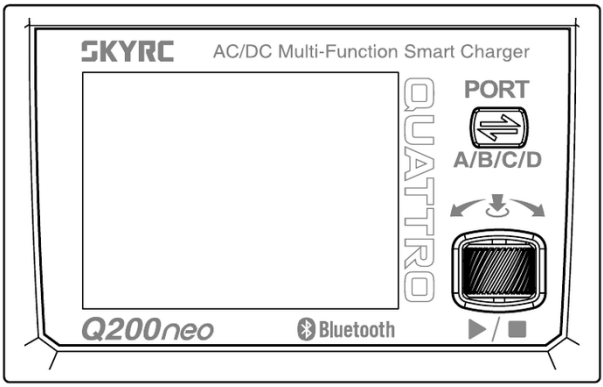

Control panel

PORT switch button

Switch between ports A, B, C and D.



Scroll wheel (▶/■)

- Navigate through ports A, B, C and D in the home menu.
- Short-press to enter parameter setting and confirm your selection.
- Scroll the wheel to select different menus or adjust parameters.
- Press and hold the scroll wheel for five seconds to access the *SYSTEM SETTING* menu.

2.4 Standard Battery Parameters

Type	Nominal voltage	Charge voltage	Storage voltage	Allowable fast charge current	Discharge voltage
LiPo	3.7 V	4.15–4.25 V	3.75–3.90 V	≤ 1C	3.0–3.4 V
Li-ion	3.6 V	4.05–4.25 V	3.70–3.85 V	≤ 1C	2.9–3.3 V
LiFe	3.3 V	3.58–3.70 V	3.25–3.40 V	≤ 1C	2.6–3.0 V
LiHV	3.8 V	4.25–4.50 V	3.85–3.95 V	≤ 1C	3.1–3.5 V
NiMH	1.2 V	—	—	≤ 1C	0.6–1.0 V
NiCd	1.2 V	—	—	≤ 1C	0.6–1.0 V
Pb	2.0 V	2.30–2.75 V	—	≤ 0.4C	1.8–2.0 V

All voltages are given per cell.

Select the correct operating procedure in accordance with the battery parameters. Incorrect settings may cause the battery to burn or even explode.

2.5 Manufacturer and Conformity

Manufacturer	SkyRC Technology Co., Ltd.
Address	Floors 4, 5, 8, Building 4, Meitai Industrial Park, Guanguang Road, Guanlan, Longhua District, Shenzhen 518110, China
E-mail	info@skyrc.com, support@skyrc.com
Website	www.skyrc.com

According to the manufacturer, the SkyRC Q200neo satisfies all relevant and mandatory CE directives and FCC Part 15 Subpart B. The manufacturer states conformity with the following standards:


Standard	Title
EN 60335-1	Household and similar electrical appliances – Safety – Part 1: General requirements

Standard	Title
EN 60335-2-29	Household and similar electrical appliances – Safety – Part 2-29: Particular requirements for battery chargers
EN 55014-1	Electromagnetic compatibility – Requirements for household appliances, electric tools and similar apparatus – Part 1: Emission
EN 55014-2	Electromagnetic compatibility – Requirements for household appliances, electric tools and similar apparatus – Part 2: Immunity – Product family standard
EN 61000-3-2	Electromagnetic compatibility (EMC) – Part 3-2: Limits for harmonic current emissions (equipment input current up to and including 16 A per phase)
EN 61000-3-3	Electromagnetic compatibility (EMC) – Part 3-3: Limitation of voltage changes, voltage fluctuations and flicker for equipment with rated current ≤ 16 A
EN 300 328	Wideband transmission systems; data transmission equipment operating in the 2.4 GHz ISM band and using wide band modulation techniques
EN 301 489-1 EN 301 489-17	ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements; Part 17: Specific conditions for broadband data transmission systems
EN 50663:2017	Generic standard for assessment of low power electronic and electrical equipment related to human exposure restrictions for electromagnetic fields (10 MHz – 300 GHz)
EN 62479	Assessment of the compliance of low power electronic and electrical equipment with the basic restrictions related to human exposure to electromagnetic fields (10 MHz – 300 GHz)
EN 61558-1 EN 61558-2-16	Safety of transformers, reactors, power supply units and similar products for supply voltages up to 1 100 V – Part 2-16: Particular requirements for switch mode power supply units
FCC Part 15B FCC Part 15.247	Unintentional radiators; operation within the bands 902–928 MHz, 2400–2483.5 MHz and 5725–5850 MHz (US regulations)

3. Power and Battery Connection

3.1 Connect to Power Source

There are two input options for the SkyRC Q200neo: **AC 100–240 V** or **DC 10–30 V** (e.g. a 12 V DC battery or a 10–30 V DC power supply).

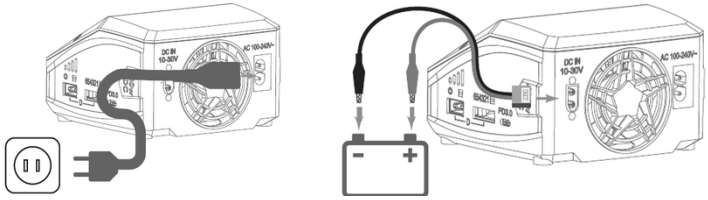

Left: AC 100–240 V mains · right: 12 V DC battery or 10–30 V DC power supply

3.2 Connect the Battery

WARNING: To avoid short circuits, always connect the charge leads to the charger first and then to the battery. Reverse the sequence when disconnecting.


▶ 3.2.1 LiPo battery connection with balance adapter

For safety reasons, it is highly recommended to charge lithium batteries (LiPo, Li-ion, LiFe and LiHV) using *Balance CHG* mode unless the battery comes without a balance connector.

The balance wire attached to the battery must be connected to the charger with the black wire aligned with the negative marking. Ensure correct polarity!

▶ 3.2.2 NiMH/NiCd or Pb battery connection

NiMH, NiCd and Pb batteries are connected to the XT60 output socket only.

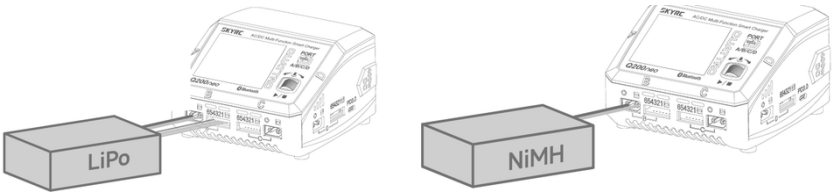

Left: LiPo battery with balance connector · right: NiMH/NiCd or Pb battery

4. Charging Programs


4.1 Working Modes

Various operations are applicable depending on the battery type. This chart illustrates which operations are relevant for the different types of batteries.

Type	Mode	Description
	Balance CHG	Balance charges the lithium battery based on the charging rate the user set. It balances each cell of the battery.
LiPo Li-ion LiFe LiHV	Charge	Charges the lithium battery based on the charging rate selected.
	Storage	Charges or discharges the battery to a specific storage voltage.
	Discharge	Discharges the lithium battery based on the discharging rate selected.
	Charge	Charges the NiMH/NiCd battery based on the charging rate selected.
	Discharge	Discharges the NiMH/NiCd battery based on the discharging rate selected.
NiMH NiCd	Re-Peak	The charger automatically peak charges the battery twice in a row. This is good for confirming the battery is fully charged.
	Cycle_D_C	1 to 3 continuous discharge → charge cycles for refreshing and restoring the performance of NiMH/NiCd batteries.
	Cycle_C_D	1 to 3 continuous charge → discharge cycles for refreshing and restoring the performance of NiMH/NiCd batteries.
	Normal	Charges the Pb battery based on the charging rate selected.
Pb	AGM Charge	Charges the AGM battery based on the charging rate selected.
	Cold Charge	Charges the Pb battery at low temperature based on the charging rate selected.
	Discharge	Discharges the Pb battery based on the discharging rate selected.

4.2 Home Screen and Menu Structure

The home screen shows the status of the selected port – battery type, cell count, mode, voltage, current, individual cell voltages, capacity, power and time. Use the PORT button to switch between ports A, B, C and D and the overview of all four ports. Short-press the scroll wheel to enter the *CHARGE SETTING* of the selected port.

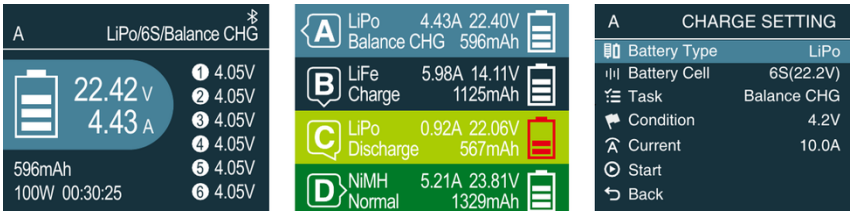

Port home screen · overview of ports A–D · charge setting

Press and hold the scroll wheel for five seconds to enter *SYSTEM SETTING*, see chapter 6.2.

※ The menu structure is identical for all four ports (A, B, C and D).

4.3 Lithium Battery Program (LiPo/LiFe/Li-ion/LiHV)

The following steps are a reference for setting the program manually. Scroll to select the port and short-press to confirm.

① **Enter CHARGE SETTING** – short-press the scroll wheel to enter *CHARGE SETTING*.

② **Select Battery Type** – short-press the scroll wheel to call out the *Battery Type* menu and scroll to select LiPo (or LiIo, LiFe, LiHV).

③ **Select Battery Cell** – scroll to *Battery Cell*, call out the menu and select the correct number of cells.


④ **Select Task** – scroll to *Task*, call out the menu and select the working mode (*Balance CHG, Charge, Storage, Discharge*).

⑤ **Select Condition** – scroll to *Condition*, call out the menu and select the terminal charging voltage.

⑥ **Set Current** – scroll to *Current*, call out the menu and select the charge or discharge current.

⑦ **Start** – scroll to *Start* and short-press the scroll wheel to confirm and initiate the program.

⑧ **Stop** – short-press the scroll wheel while the program is running to call up *Stop Working?*. Short-press the scroll wheel again to confirm, or short-press the PORT button to go back without stopping.

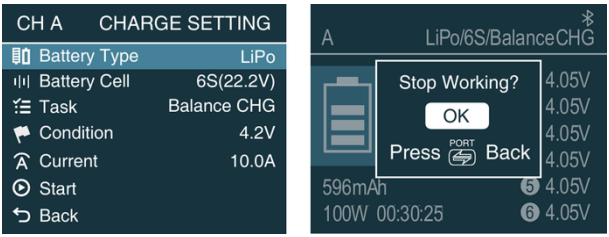

Lithium battery charge setting · stop confirmation

4.4 NiMH/NiCd Battery Program

Scroll to select the port and short-press to confirm.

① **Enter CHARGE SETTING** – short-press the scroll wheel to enter *CHARGE SETTING*.

② **Select Battery Type** – short-press the scroll wheel to call out the *Battery Type* menu and select NiMH (or NiCd).

③ **Select Battery Cell** – scroll to *Battery Cell*, call out the menu and select the correct number of cells.


④ **Select Task** – scroll to *Task*, call out the menu and select the working mode.

⑤ **Select Condition** – scroll to *Condition*, call out the menu and set the delta voltage (−ΔV).

⑥ **Set Current** – scroll to *Charge Current*, call out the menu and select the charge or discharge current.

⑦ **Start** – scroll to *Start* and short-press the scroll wheel to confirm and initiate the program.

⑧ **Stop** – short-press the scroll wheel to call up the stop prompt; short-press the scroll wheel again to confirm, or short-press the PORT button to return.

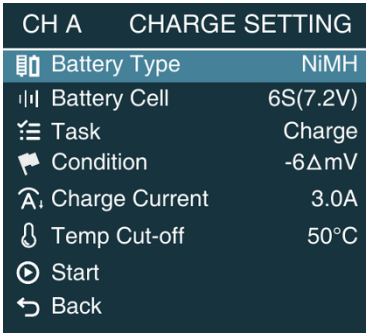

NiMH battery charge setting

4.5 Pb Lead-Acid Battery Program

Scroll to select the port and short-press to confirm.

① **Enter CHARGE SETTING** – on the main interface, press the scroll wheel to enter *CHARGE SETTING*.

② **Select Battery Type** – short-press the scroll wheel to call out the *Battery Type* menu and select PB.

③ **Select Battery Cell** – scroll to *Battery Cell*, call out the menu and select the correct number of cells (3S, 6S or 12S).


④ **Select Task** – scroll to *Task*, call out the menu and select the working mode (*Normal, AGM Charge, Cold Charge, Discharge*).

⑤ **Select Condition** – scroll to *Condition*, call out the menu and set the voltage.

⑥ **Set Current** – scroll to *Current*, call out the menu and select the charge or discharge current.

⑦ **Start** – scroll to *Start* and short-press the scroll wheel to confirm and initiate the program.

⑧ **Stop** – short-press the scroll wheel to call up the stop prompt; short-press the scroll wheel again to confirm, or short-press the PORT button to return.

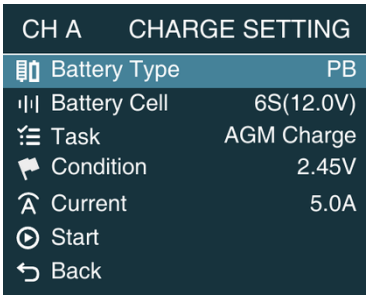

Lead-acid battery charge setting

5. Additional Functions

5.1 Charger Master (PC/Mac)


The Q200neo offers the convenience of charging and discharging directly from your computer, whether you are using Windows or macOS. It provides a visual display of various parameters, such as charge time, capacity, charge current and voltage, presented in a curve format.

① Download the latest Charger Master onto your desktop. Unzip and open it.

② Choose *Data* as the USB work mode in *System Settings* → *USB*.

③ Connect the Q200neo to your computer via a USB Type-C cable.

④ On the top left panel, choose the expected work mode to initiate the program.

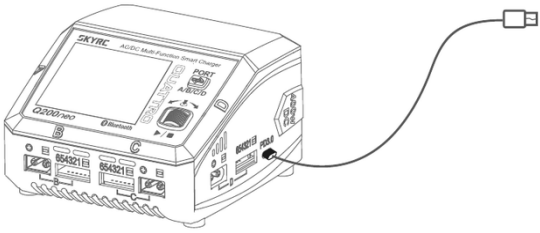

PC connection

5.2 SkyRC App Control

With the built-in Bluetooth 5.0, you can easily control the Q200neo charger through the SkyRC app. The firmware can be upgraded over the air (OTA). Download the SkyRC app from the App Store or Google Play, or scan the QR code below.


Download the SkyRC app

5.3 DC Power


On the main menu, hold the scroll wheel for five seconds to enter *SYSTEM SETTING → DC Power*. Adjust the output voltage and current and select *Start* to activate the DC power working mode.

When acting as a digital power supply, the Q200neo can regulate its output voltage or output current at a constant level. Constant current (CC) mode and constant voltage (CV) mode switch automatically as follows:

- If $R_{load} > (V_{out} / I_{out})$, the power supply is in CV mode.
- If $R_{load} < (V_{out} / I_{out})$, the power supply is in CC mode.

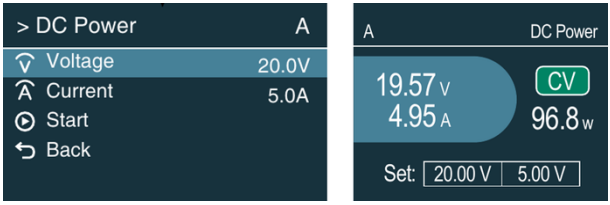

DC Power menu · port screen in DC power mode

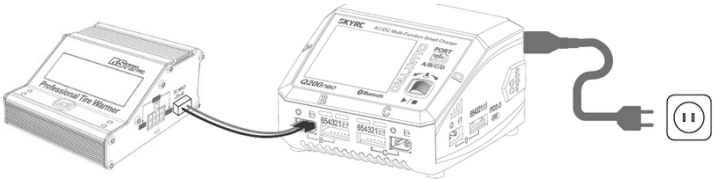

Example: powering an external device from a charger port

Benefits of a CC/CV power supply

① **Versatility** – CC/CV power supplies can switch between constant current and constant voltage modes. This makes them suitable for a wide range of applications, from powering delicate electronics to driving high-power devices.

② **Protection** – CC mode can prevent overcurrent situations, which could damage electronic devices or create hazardous situations. By setting a maximum current limit, the power supply ensures that it won't deliver more current than the device can safely handle.

③ **Battery charging** – CC/CV power supplies are particularly useful for charging lithium-ion batteries, which require a precise charging protocol. Initially, the charger works in CC mode to restore most of the battery's capacity, then switches to CV mode to top off the charge while preventing overcharging.


④ **Optimised for various loads** – some loads require a specific voltage to operate correctly, while others need a particular current. A CC/CV power supply adapts to these needs, providing a stable and suitable power output.

⑤ **Improved efficiency** – by dynamically switching between modes depending on the load, a CC/CV power supply can often operate more efficiently than a power supply using only one mode.

⑥ **Safe for LED driving** – LEDs are current-driven devices, and a slight increase in voltage can lead to a high current, damaging the LEDs. CC mode allows safe driving of LEDs; CV mode can be useful when LEDs are configured in parallel strings.

5.4 USB Type-C PD/QC3.0 Output

The 20 W USB-C PD 3.0 charging port allows rapid charging of smartphones, tablets and the 2020 MacBook Air. To charge devices, set the USB mode to *Charge* or *Auto* in *System Settings* → *USB*.

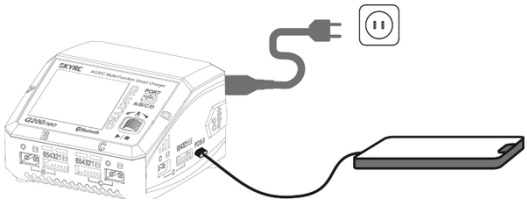

Charging a device from the USB-C port

6. Settings


6.1 Charge Settings (CHARGE SETTING)

On the main interface, press the scroll wheel to enter the charge setting. Switch between ports A, B, C and D by pressing the PORT button. The following parameters can be set:

Menu	Definition
Battery Type	Select the desired battery type (LiPo, Li-ion, LiFe, LiHV, Pb, NiMH, NiCd).
Battery Cell	Select the number of battery cells by battery type (Li-xx: 1–6S, Ni-xx: 2–15S, Pb: 3S/6S/12S).
Task	Select the work mode to be performed (Balance CHG, Charge, Storage, Discharge, etc.).
Condition	Set the cut-off voltage.
Current	Set the charge or discharge current.
Start	Start the program.
Back	Back to the main interface.

6.2 System Setting (SYSTEM SETTING)

On the main interface, hold the scroll wheel (▶/■ button) for five seconds to enter the system setting.

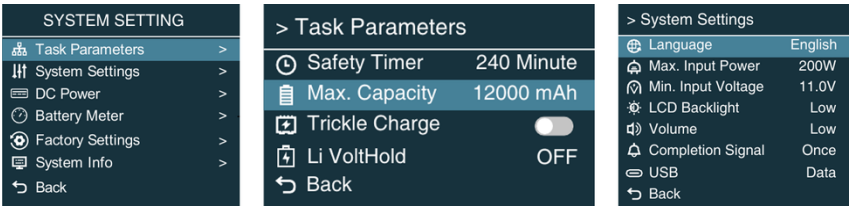

SYSTEM SETTING · Task Parameters · System Settings

Menu	Option	Definition
	Safety Timer	Customise a period for program protection.
	Max. Capacity	Customise the capacity protection.
Task Parameters	Trickle Charge	Enable/disable trickle charge.
	Li VoltHold	Enable/disable Li VoltHold. If a difference greater than 0.02 V between cells is detected, a small current is applied to keep the battery voltage.
	Back	Back to the previous interface.

Menu	Option	Definition
	Language	Select the desired language.
	Max. Input Power	The maximum charge power: AC input 200 W, DC input 400 W.
	Min. Input Voltage	Set the minimum voltage for input protection.
	LCD Backlight	Adjust the brightness of the screen.
System Settings	Volume	Adjust/turn off the volume of the keys and beep.
	Completion Signal	Choose how you are reminded when the program completes. If *Repeat* is chosen, the charger plays the completion signal every half an hour.
	USB	Mode of the USB Type-C port: *Auto* – the charger detects the USB port input automatically; *Data* – connect for communication; *Charge* – charge digital devices.
	Back	Back to the previous interface.
DC Power (press PORT to switch ports)	Voltage	Set the output voltage (1.0–30.0 V).
	Current	Set the output current (0.1–10.0 A).
	Start	Enable DC power output and return to the main interface.
	Back	Back to the previous interface.
Battery Meter	—	Measure the battery voltage and internal resistance (press PORT to switch ports).
Factory Settings	—	Restore the factory settings.
System Info	—	Check the current system status (hardware and firmware version).
Back	—	Back to the previous interface.



Battery Meter – cell voltages and internal resistance · Factory Settings

6.3 Voltage Calibration (for expert users only)

You can calibrate the voltage directly on the charger with a 6S LiPo battery. For more information, please contact the manufacturer at info@skyrc.com.

6.4 Firmware Upgrade Recovery

To recover from a firmware upgrade failure, please follow these steps:

① Press and hold the scroll wheel, then connect the power cord; the Q200neo will power on with a blue screen notice.

② Connect the Q200neo to your computer via a USB Type-C cable.

③ Launch Charger Master on your computer.

④ When the status shows *CONNECTED*, click to check for new firmware.

⑤ Click to upgrade after a new firmware is detected.

⑥ Wait for the progress bar to finish and reach 100 %. The process takes about 5 minutes.

7. Errors and Warnings

In the event of a fault, the charger displays an error message and sounds an alarm.

Error message	Explanation
Error: DC Input Low!	DC input voltage is lower than preset.
Error: DC Input High!	DC input voltage is higher than preset.
Error: Battery Error!	The battery is broken or not detected.
Error: Connection Break!	The battery connection is broken.
Cell Error	The cells do not match.
Battery Type Error!	The battery type is wrong.
Error: Overcharge!	The battery is overcharged.
Error: Over Time!	The program has timed out.
Error: Internal Temp. Too High!	The internal temperature is too high.
Error: Over Load!	The charger is overloaded.
Error: Reversed Polarity	The battery connection is reversed.
Error: Fully Charged	The battery is already fully charged.
Error: Outlet Overload	The output is overloaded.
Error: Balance Connection Break	The balance connection is disconnected.
Error: Cell Volt Diff.	The voltage difference between cells is too high.
Error: AC to DC Too Low!	The input voltage is too low.
Error: Power Setting Error	The DC power setting is incorrect.

8. Information for the EU and Czech Market

8.1 Importer and responsible person in the EU

The product is placed on the European Union market by the importer stated below, who is at the same time the responsible person within the meaning of Article 16 of Regulation (EU) 2023/988 of the European Parliament and of the Council on general product safety (GPSR).

Importer / responsible person in the EU	Rotorama, s.r.o.
Company ID (IČO)	051 57 692
VAT ID (DIČ)	CZ05157692
Registered office	Okrajová 1351, 674 01 Třebíč, Czech Republic
Contact and postal address (business premises)	Türkova 828/20, 149 00 Praha 4, Czech Republic
E-mail	info@rotorama.cz
Phone	+420 252 252 098
Website	www.rotorama.cz

8.2 Product conformity

CE

- The product bears the **CE** marking and complies with the requirements of the applicable European Union harmonisation legislation.
- A copy of the **EU Declaration of Conformity** is available from the importer at the address stated above or at the e-mail address info@rotorama.cz.
- **Product identification:** the type designation (Q200neo) and the serial number are given on the rating label on the device; the hardware and firmware versions and the serial number can also be found in *SYSTEM SETTING → System Info*.

8.3 Disposal of electrical equipment



- The crossed-out wheeled bin symbol on the product, its packaging or in the documentation means that at the end of its service life the product **must not be disposed of together with mixed municipal waste**.
- Hand it over at a take-back point for electrical equipment – at a collection yard, at a take-back point of a collective system, or at the retailer when purchasing a new equivalent product. Take-back is free of charge for the end user.
- The obligations under Act No. 542/2020 Coll., on end-of-life products, are fulfilled by the importer through a collective take-back system.
- Proper disposal helps prevent negative impacts on the environment and human health and contributes to the reuse of secondary raw materials.

Through its contractual partner **ASEKOL a.s.**, the company ensures the take-back of waste electrical equipment from households and the separate collection of waste electrical equipment, batteries and accumulators in accordance with the applicable legislation. The customer is entitled to hand over old electrical equipment or a battery or accumulator at any collection point of the above contractual partner. The addresses of these take-back points are listed at www.asekol.cz, www.ecobat.cz and also https://visoh2.mzp.cz/RegistrMistZO/RegistrMistZOPublic/MapaMistZpetOdberu.

9. Warranty and rights arising from defective performance

9.1 Rights of the buyer under Czech law

The rights and obligations of the contracting parties are governed by Czech law, in particular by Act No. 89/2012 Coll., the Civil Code, and Act No. 634/1992 Coll., on consumer protection. The manufacturer's warranty terms set out below (Chapter 9.2) **do not in any way limit** the buyer's rights arising from these regulations.

- The seller is liable to the buyer for the product being free of defects on receipt. If the buyer is a consumer, a defect may be notified **within two years of receipt** of the product (Section 2165 of the Civil Code).
- If a defect appears within **one year** of receipt, the product is deemed to have been defective already at the time of receipt (Section 2161(5) of the Civil Code).
- When purchasing online, a consumer has the right to **withdraw from the contract within 14 days** of receiving the goods without giving a reason (Section 1829 of the Civil Code).
- Claims should be made with the retailer from whom you purchased the product. The importer's contact details are given in Chapter 8.1.
- The competent body for out-of-court settlement of consumer disputes is the **Czech Trade Inspection Authority**, Štěpánská 796/44, 110 00 Prague 1, www.coi.cz.

9.2 Manufacturer's warranty terms

❊ The following text is the manufacturer's original warranty statement.

Liability exclusion

This charger is designed and approved exclusively for use with the types of battery stated in this instruction manual. SkyRC accepts no liability of any kind if the charger is used for any purpose other than that stated. The manufacturer is unable to ensure that you follow the instructions supplied with the charger and has no control over the methods you employ for using, operating and maintaining the device. For this reason, it is obliged to deny all liability for loss, damage or costs that are incurred due to the incompetent or incorrect use and operation of its products, or which are connected with such operation in any way. Unless otherwise prescribed by law, the manufacturer's obligation to pay compensation, regardless of the legal argument employed, is limited to the invoice value of those SkyRC products which were immediately and directly involved in the event in which the damage occurred.

Warranty and service

The manufacturer guarantees this product to be free of manufacturing and assembly defects for a period of one year from the time of purchase. The warranty only applies to material or operational defects which are present at the time of purchase. During that period, the manufacturer will repair or replace free of service charge products deemed defective due to those causes. This warranty is not valid for any damage or subsequent damage arising as a result of misuse, modification, or failure to observe the procedures outlined in this manual.

Manufacturer's note: The manufacturer's warranty service is valid in China only. If you need warranty service overseas, please contact your dealer in the first instance, who is responsible for processing guarantee claims overseas. If you have any questions which are not covered in this manual, please send an e-mail to info@skyrc.com.